



CONNECTOR A

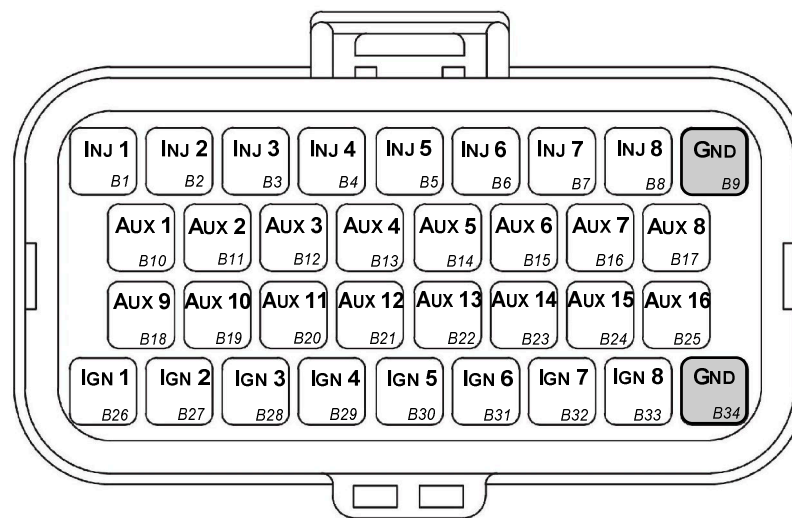


CONNECTOR B

LOOKING INTO ECU

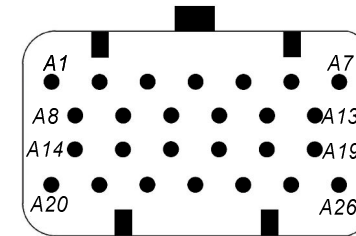


CONNECTOR A

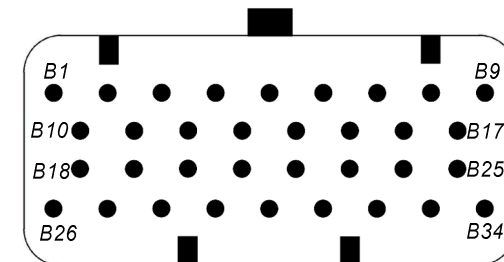


CONNECTOR B


LOOKING INTO ECU

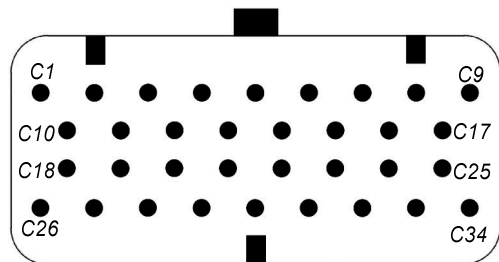


CONNECTOR C

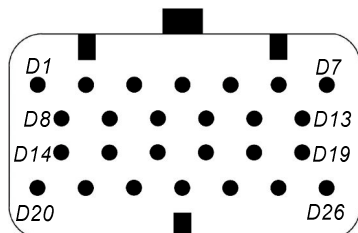

CONNECTOR D

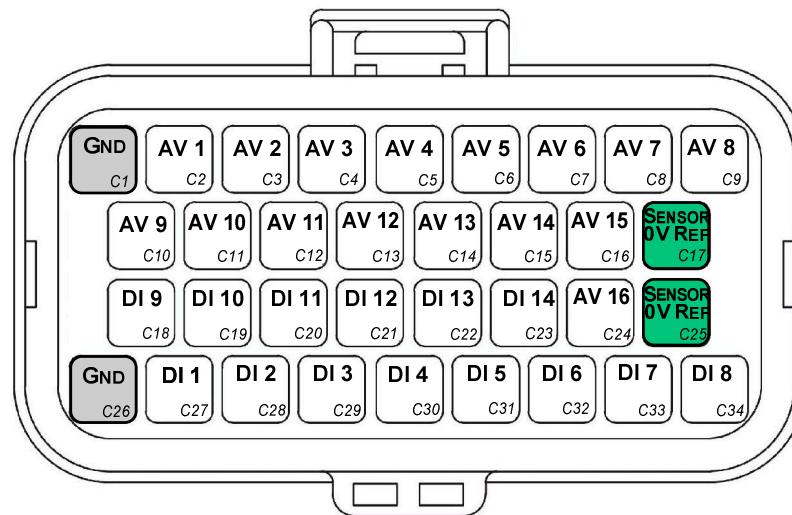

CONNECTOR C

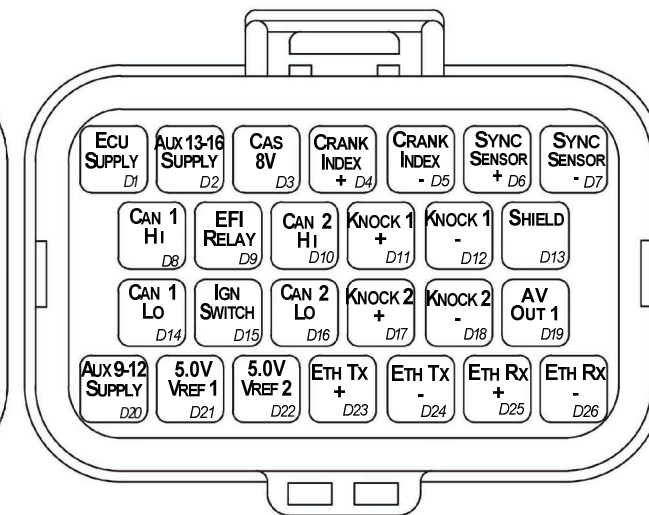

CONNECTOR D

NOTE: The **Sensor 0V Ref** pin(s) are specialised ground outputs for all analog sensors. Connect direct to the sensor 0V pin, **DO NOT** connect to the Engine Block or ECU Ground.